

How To Reset an OKI 12i Printer to Factory Defaults

1. Turn your OKI12i printer off.
2. Press Menu button while turning printer on
3. Continue to press menu button until readout displays 'User NNT'
4. Release Menu button then press it again
5. Display should show 'Menu Reset'
6. Press the “**Enter**” button and printer will be reset to default settings