




How to Enable/Disable Auto-Insert Notification Windows 95 / 98

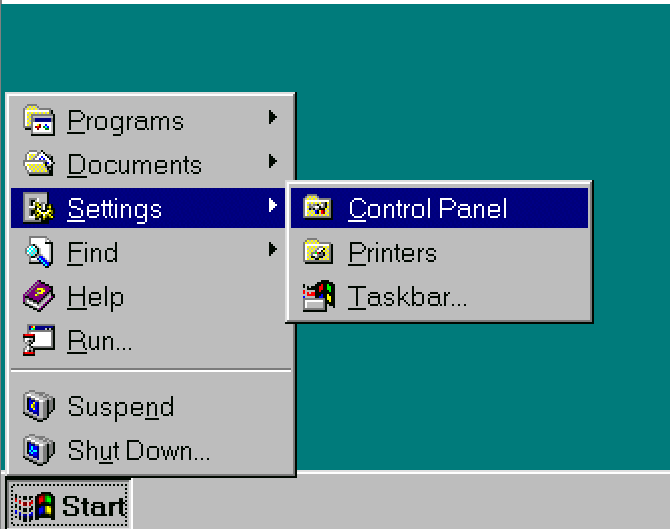


1. Click "Start" button and select "Settings", then "Control Panel".

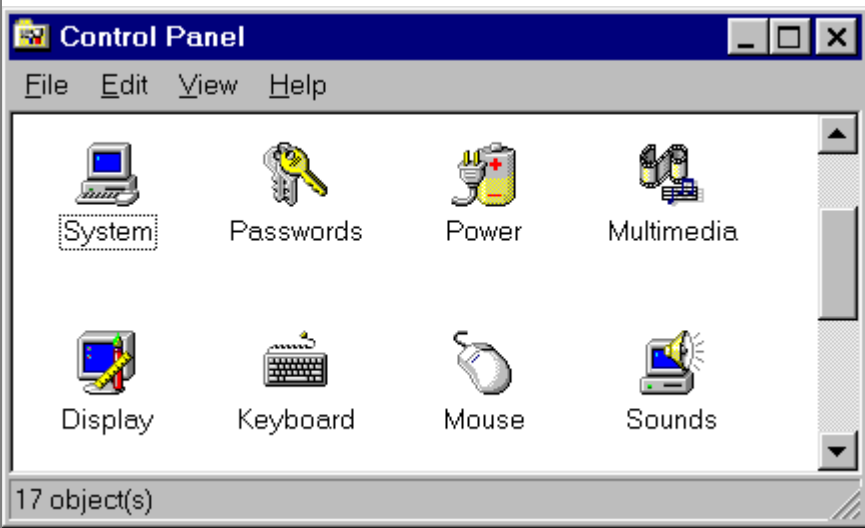

2. Double click the "System" icon in the Control Panel window.

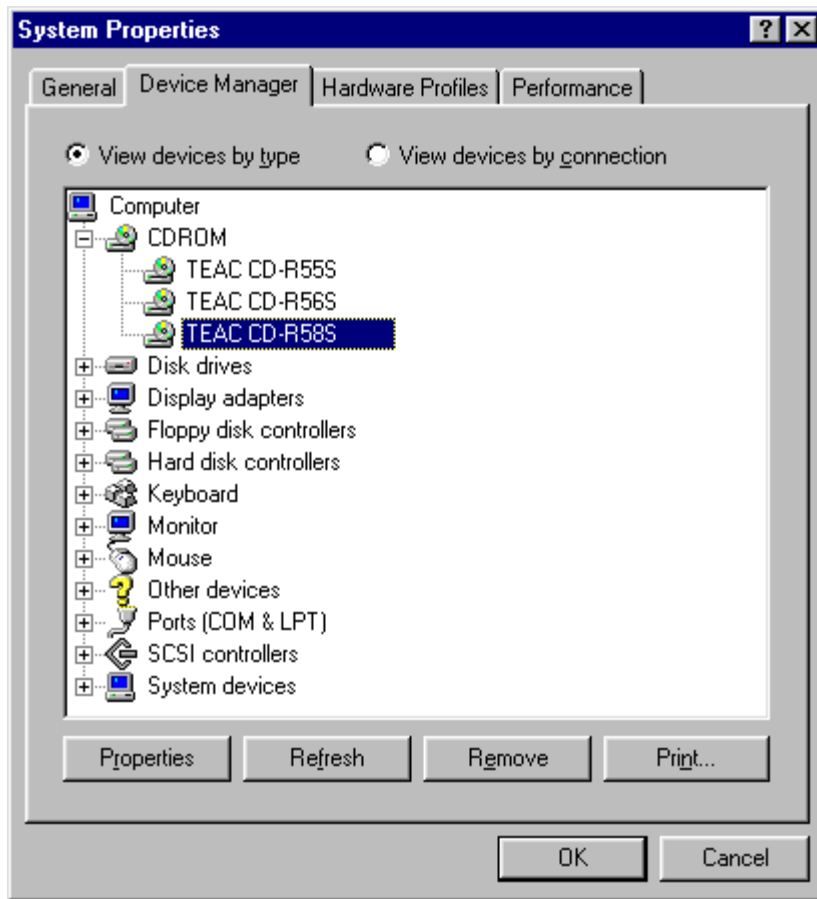

3. Click the "Device Manager" tab of the System Properties dialog.
4. Click the "[+]" marking of the CD-ROM drive.
5. Double click the CD-ROM drive of which you intend to disable the "Auto insert notification". Then the property of the drive will appear.

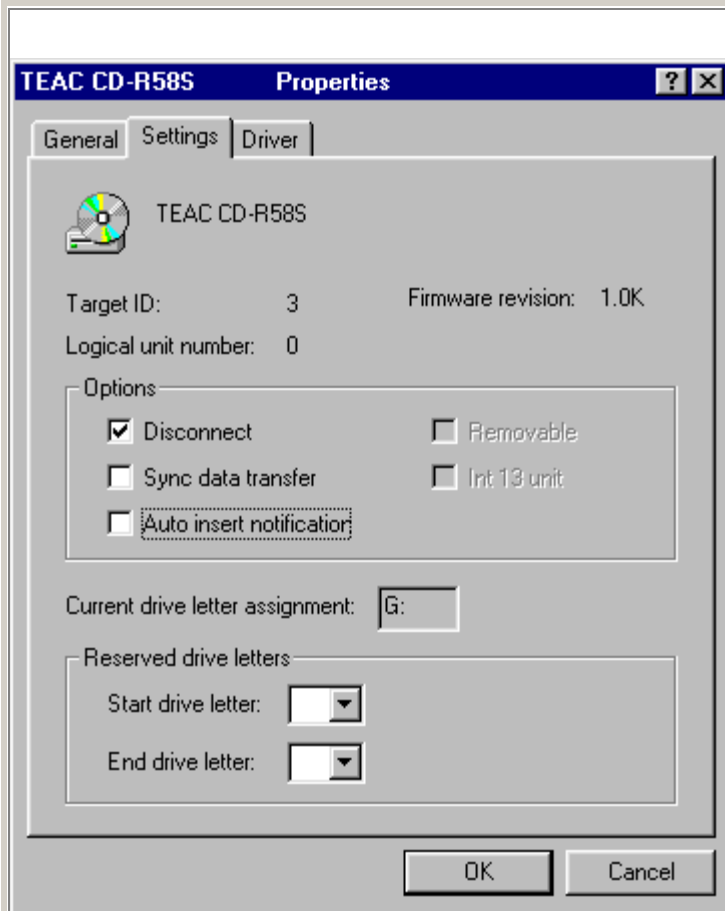

6. Click the "Settings" tab then clear the "check mark" of the "Auto Insert notification" under the Options by clicking the "check mark".

7. Click "OK" and the dialog of "Do you want to restart your computer now?" will appear. Then select "Yes" to close the Windows.
The "Auto insert notification" will be disabled after you reboot Windows.